



Mellanox ConnectX[®]-2 Firmware (fw-ConnectX2) Release Notes

Rev 2.7.000

www.mellanox.com

NOTE:

THIS INFORMATION IS PROVIDED BY MELLANOX FOR INFORMATIONAL PURPOSES ONLY AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL MELLANOX BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS HARDWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Mellanox Technologies
350 Oakmead Parkway
Sunnyvale, CA 94085
U.S.A.
www.mellanox.com
Tel: (408) 970-3400
Fax: (408) 970-3403

Mellanox Technologies, Ltd.
PO Box 586 Hermon Building
Yokneam 20692
Israel
Tel: +972-4-909-7200
Fax: +972-4-959-3245

© Copyright 2009. Mellanox Technologies, Inc. All Rights Reserved.
Mellanox®, ConnectX®, InfiniBlast®, InfiniBridge®, InfiniHost®, InfiniRISC®, InfiniScale®, and InfiniPCI® are registered trademarks of Mellanox Technologies, Ltd.
BridgeX and Virtual Protocol Interconnect are trademarks of Mellanox Technologies, Ltd.

All other marks and names mentioned herein may be trademarks of their respective companies.

"

Table of Contents

Table of Contents	3
Chapter 1 Overview	4
Chapter 2 Revision Compatibility	6
Chapter 3 Changes and Major New Features	7
3.1 Changes of Rev 2.7.000	7
Chapter 4 Bug Fixes	8
Chapter 5 Known Issues	9
Chapter 6 Creating a Device Configuration (.ini) File	10
6.1 Configuration (.ini) File Format	10

1 Overview

These are the release notes for the ConnectX®-2 and ConnectX®-2 EN adapters firmware, fw-ConnectX2 Rev 2.7.000. This firmware supports the following protocols:

- InfiniBand
- Ethernet
- Fibre Channel over Ethernet (FCoE)
- Virtual Protocol Interconnect (VPI) – this capability enables ConnectX-2 devices to support the InfiniBand, Ethernet and DCE network standards, including auto-sensing of the network protocol to which each device port is connected.

This firmware supports the devices and protocols listed in Table 1. For the most updated list of adapter cards supported, visit the firmware download pages via <http://www.mellanox.com>.

Note: After burning new firmware to an adapter card, reboot the machine so that the new firmware can take effect. If you do not reboot, you will get an error in the RUN_FW command.

Table 1 - PCI Device ID (Sheet 1 of 2)

PCI Device ID (Decimal)	Device Part Number	Device Name	Supported Protocols
25408	MT25408B0-FCC-SI	ConnectX-2, Dual Port 10Gb/s InfiniBand / 10GigE Adapter IC with PCIe 2.0 x8 2.5GT/s Interface	InfiniBand, Ethernet, FCoE, VPI
25418	MT25408B0-FCC-DI	ConnectX-2, Dual Port 20Gb/s InfiniBand / 10GigE Adapter IC with PCIe 2.0 x8 2.5GT/s Interface	
26418	MT25408B0-FCC-GI	ConnectX-2, Dual Port 20Gb/s InfiniBand / 10GigE Adapter IC with PCIe 2.0 x8 5.0GT/s Interface	
26428	MT25408B0-FCC-QI	ConnectX-2, Dual Port 40Gb/s InfiniBand / 10GigE Adapter IC with PCIe 2.0 x8 5.0GT/s Interface	

Table 1 - PCI Device ID (Sheet 2 of 2)

PCI Device ID (Decimal)	Device Part Number	Device Name	Supported Protocols
25448	MT25408B0-FCC-SE	ConnectX-2 EN, Dual Port 10GigE Adapter IC with PCIe 2.0 x8 2.5GT/s Interface	Ethernet
26448	MT25408B0-FCC-TE	ConnectX-2 EN, Dual Port 10GigE Adapter IC with PCIe 2.0 x8 5.0GT/s Interface	
26478	MT25408B0-FCC-QE	ConnectX-2 EN, Single Port 40GigE Adapter IC with PCIe 2.0 x8 5.0GT/s Interface	
25458	MT25458B0-FCC-SE	ConnectX-2 EN, Dual Port 10BASE-T Adapter IC with PCIe 2.0 x8 2.5GT/s Interface	
26458	MT25458B0-FCC-TE	ConnectX-2 EN, Dual Port 10BASE-T Adapter IC with PCIe 2.0 x8 5.0GT/s Interface	

The document consists of the following sections:

- “Revision Compatibility” on page 6
- “Changes and Major New Features” on page 7
- “Bug Fixes” on page 8
- “Known Issues” on page 9
- “Creating a Device Configuration (.ini) File” on page 10

2 Revision Compatibility

Firmware fw-25408 Rev 2.7.000 complies with the following programmer's reference manual:

- *ConnectX Programmer's Reference Manual (PRM), Rev 0.39 or later*, which has Command Interface Revision 0x3. The command interface revision can be retrieved by means of the QUERY_FW command and is indicated by the field *cmd_interface_rev*.

3 Changes and Major New Features

3.1 Changes of Rev 2.7.000

First release of firmware support ConnectX[®]-2 and ConnectX[®]-2 EN devices. Among the features included in this firmware release are:

- Support for extended port counters
- Support for SGMII
- Support for 802.3ap auto-negotiation
- Support for KR start-up
- Support for 40 Gb/s Ethernet
- Support for Ethernet loopback
- Support for ModStatCfg opcode modifiers 2,3 (query)
- Support for ModStatCfg.mac

4 Bug Fixes

N/A

5 Known Issues

The following table describes known issues in this firmware release and possible workarounds.

Table 2 - Known Issues

Index	Issue	Description	Current Implemented Workaround in FW	Possible Workaround	Scheduled Release (fix)
1.	UAR Bar is too small for 64k-page machines	The small BAR causes driver loading to fail	N/A	Change the "log2_uar_bar_megabytes" .ini parameter under the [HCA] section as follows: log2_uar_bar_megabytes = 5	N/A
2.	Change of memory bars on a disabled system	Changing memory bars size / addresses between SYS_DIS and SYS_EN may cause the device to hang (ID: 24206)	N/A	N/A	N/A
3.	BAR resizing on an enabled system	Changing bar sizes when a system is enabled may cause the device to hang (ID: 24208)	N/A	N/A	N/A
4.	Ethernet only: Must query all capabilities upon boot	If not all capabilities are queried upon boot, then the query command may fail. See the QUERY_CAP command in <i>ConnectX EN Programmer's Reference Manual</i>	N/A	Query all capabilities upon boot	N/A
5.	Disrupting QDR negotiation may lead to port rising as SDR	Disconnecting an IB cable (or closing the port) during QDR negotiation and then reconnecting (or reopening) may cause the adapter to bring up the port at SDR	N/A	Disconnect the cable (or close the port) again and then reconnect (reopen). To avoid this scenario, wait for QDR negotiation to finish prior to disconnecting the cable (or closing the port) and reconnecting (or reopening). The following are two possible methods to verify QDR negotiation is complete: a. The physical (green) LED is on. b. A query of LinkPhyState using a GetPortInfo MAD indicates LinkUp.	N/A
6.	MTNIC driver is not supported				
7.	Ethernet link issues with back-to-back setting on 5m Twinax cables				
8.	InfiniBand Static rate is not supported				
9.	Wrong reporting of transceiver type				
10.	Autosensing after cable reconnection to different port protocol	If you disconnect a cable from an IB/Eth port and reconnect it to an Eth/IB port (different protocol), the link may not rise	N/A	Restart the driver (openibd restart)	N/A

6 Creating a Device Configuration (.ini) File

Mellanox firmware burning tools enable setting and/or changing configuration variables by the use of an optional configuration (.ini) file. This is needed in case the default values of some variables do not suit a user's specific system requirements. This section describes how to create this configuration file.

To begin with, the .ini file is a text file is composed of one or several configuration sections (see Section 6.1 for the format and/or an example). It is recommended to include, under the appropriate sections, only those variables that need to be changed.

A firmware release includes a reference file called fw-25218-defaults.ref. This file contains the list of all variables which can be configured by a configuration (.ini) file. For each variable the reference file includes a short explanation, the [<section>] it should be under, the range of possible values, and a line with the default setting of the variable which is assumed by the firmware release.

To create the .ini file, simply copy the lines with the variables you wish to set, paste them under their appropriate [<section>] headings, and change the setting values as desired.

6.1 Configuration (.ini) File Format

The .ini file is composed of one or more sections with variable settings. Each section in the file starts with its name between square brackets, e.g. [ADAPTER], [HCA], [IB], etc. The section name is followed by one or more lines of configuration settings and comments, as in the .ini file example shown below. Note that comment lines start with a semicolon.

Excerpt from fw-25408-defaults.ref:

```
;;;; VPD support can be Disabled/Enabled
;;;; Under [ADAPTER] section
;;;; Boolean parameter. Possible values: true, false .
vpd_enable = true
```

Example of a .ini file:

```
;Begin of .ini file
[ADAPTER]
vpd_enable = false
;This is a comment line
;End of .ini file
```